


1-pc and 2-pc

Sprinkler Head Guards

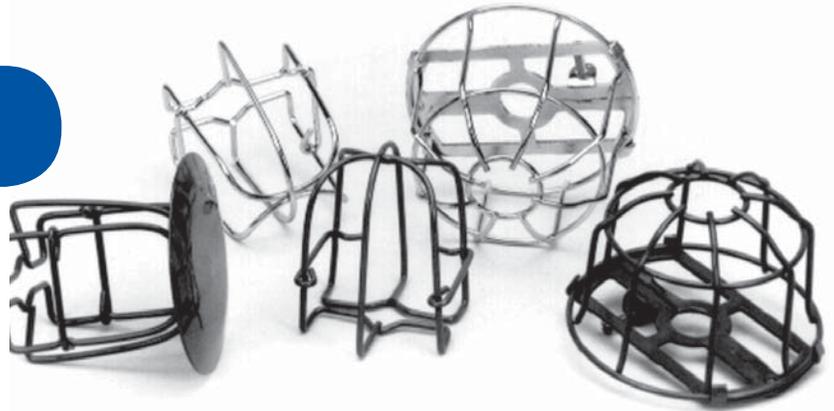

Description

Both the 1-pc and 2-pc head guards are designed to provide protection against low level impacts to the sprinkler head. The 1-pc design features a dual hook attaching system to allow for installation on most 1/2" and 3/4" IPS sprinkler heads. The 1-pc also can be provided with a water shield for in-rack sprinkler systems. The 2-pc designed features a cage and clamping base plate. This design can provide additional protection for sprinklers that may experience greater opportunity for repeated abuse. Both types of head guards are available in either red or chrome finish. **Caution: Head guards will not protect sprinkler heads from severe abuse or impact.**

Installation

1-pc Head Guard installation can be accomplished without tools and can be installed in the pendent* or upright position. Disengage both hooks on either side of the guard. Spread the cage open just enough to clear the sprinkler frame and deflector being careful not to damage the sprinkler. Engage the open end of the cage at the base of the sprinkler between the frame and the threads. Reengage both hooks on either side

of the sprinkler. **2-pc Head Guard** installation requires the use of a common screw driver. Place the base plate around the top thread of the sprinkler head closest to the frame. Close the base plate around the thread. At the same time, hold the cage to the base plate until the base plate engages the cage with its four tangs. Adjust the set screw until base plate is firmly attached to the sprinkler.

Specifications

Type:
Formed wire cage

Sizes:
1-pc
1/2" or 3/4" IPS
2-pc
1/2" IPS

Material:
.12" steel wire

Finishes:
Red enamel
Chrome

* The 1-pc head guard with shield will not function properly when installed in the pendent position. For this application use a 1-pc head guard without the shield and a water shield that will thread onto the sprinkler base according the sprinkler head manufacturers specifications.

