





National Fire Equipment Ltd.

Installation Options CT300

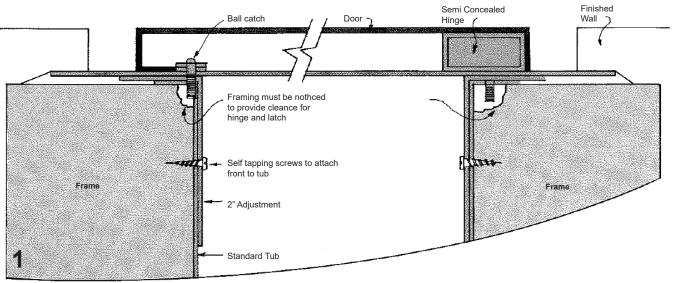

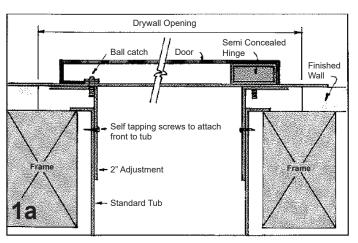

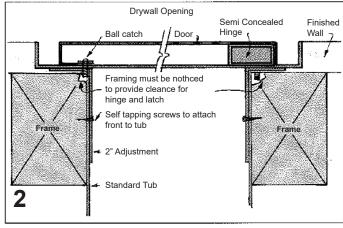

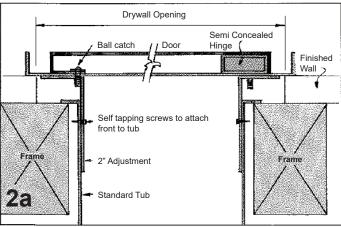

Separate front makes for ease of installation.

Variety of mounting gives complete flexibility.

Mounting No. 1 - For 100% recessed mounting before installation of drywall. Nothing protrudes beyond the wall surface and with the use of "3 Moulding" around the edges of drywall, the installation is very sharp and neat. This method of mounting is recommended as the best.

Mounting No. la - Same design features as No. 1. However, the entire front is mounted on top of the finished wall. The door protrudes beyond the wall surface.

Mounting No. 2 - For 100% recessed mounting after installation of drywall. The trim is turned up at edges and the entire front can be fit between the drywall service

Mounting No. 2a - Same design features as No_ 2. However, the entire front is mounted on top of the finished wall. The door and trim protrude beyond the wall surface. This method of mounting is recommended for finished buildings where finished walls are in place.